






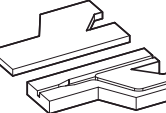

KHRQM22M20T8	KHRQM22M75T8	KHRQM23M75TA	KHRQM23M75T8
KHRQM22M29T8	KHRQM23M20TA	KHRQM23M20T8	
KHRQM22M64T8	KHRQM23M29TA	KHRQM23M29T8	
KHRAM22M65T	KHRQM23M64TA	KHRQM23M64T8	

Installation manual
Refnet branches



IMPROPER INSTALLATION OR ATTACHMENT OF EQUIPMENT OR ACCESSORIES COULD RESULT IN ELECTRIC SHOCK, SHORT-CIRCUIT, LEAKS, FIRE OR OTHER DAMAGE TO THE EQUIPMENT. BE SURE ONLY TO USE ACCESSORIES MADE BY DAIKIN WHICH ARE SPECIFICALLY DESIGNED FOR USE WITH THE EQUIPMENT AND HAVE THEM INSTALLED BY A PROFESSIONAL. IF UNSURE OF INSTALLATION PROCEDURES OR USE, ALWAYS CONTACT YOUR DAIKIN DEALER FOR ADVICE AND INFORMATION.

THIS KIT INCLUDES THE FOLLOWING PARTS

model	liquid branch	discharge gas branch	suction gas branch	heat insulation material	reducer/expander pipe
					
KHRQM22M20T8	○	—	○	2 sets	4 pipes
KHRQM22M29T8	○	—	○	2 sets	5 pipes
KHRQM22M64T8	○	—	○	2 sets	6 pipes
KHRQM22M75T8	○	—	○	2 sets	7 pipes
KHRAM22M65T	○	—	○	2 sets	4 pipes
KHRQM23M20TA KHRQM23M20T8	○	○	○	3 sets	TA: 3 pipes T8: 2 pipes
KHRQM23M29TA KHRQM23M29T8	○	○	○	3 sets	5 pipes
KHRQM23M64TA KHRQM23M64T8	○	○	○	3 sets	8 pipes
KHRQM23M75TA KHRQM23M75T8	○	○	○	3 sets	TA: 17 pipes T8: 13 pipes

DIMENSIONS OF THE PIPING

Branch dimensions

	liquid branch	discharge gas branch	suction gas branch
KHRQM22M20T8		—	
KHRQM22M29T8		—	
KHRQM22M64T8		—	
KHRQM22M75T8		—	

Copyright 2007 Daikin



4PW36003-1 C 0000000G

DAIKIN EUROPE N.V.
Zandvoordestraat 300, B-8400 Oostende, Belgium

KHRQM22 + 23M20~75 + KHRAM22M65T
4PW36003-1C – 2023.10

KHRQM22 + 23M20~75 + KHRAM22M65T
Refnet branches
4PW36003-1C – 2023.10

DAIKIN

Installation manual

	liquid branch	discharge gas branch	suction gas branch
KHRAM22M65T			
KHRQM23M20TA KHRQM23M20T8			
KHRQM23M29TA KHRQM23M29T8			
KHRQM23M64TA KHRQM23M64T8			
KHRQM23M75TA KHRQM23M75T8			

Reducer/expander pipe dimensions

1 	2 	3 	4
5 	6 	7 	8
9 	10 	11 	12
13 	14 	15 	
16 			


INSTALLATION PROCEDURE




INSTALLATION PRECAUTIONS

Make sure to flow nitrogen gas through the pipe when brazing.

Use a pipe cutter to cut off the pipe at a position where the size of the pipe fits the size of the connecting pipe selected according to the pipe selection procedure.

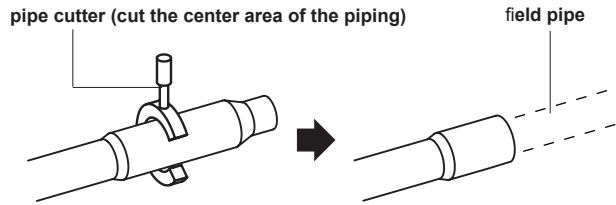


Use the supplied reducer/expander pipes when necessary

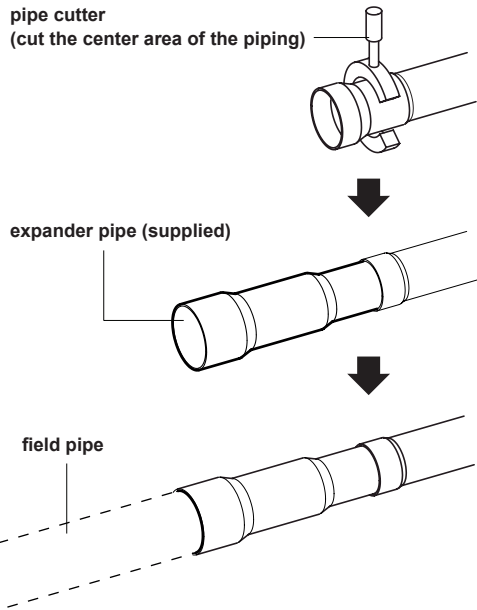


Installation orientation

Install the branches so that they are oriented vertically or horizontally.

 horizontal viewpoint




or vertical

 


Heat insulation

Be sure to insulate the branches against heat.

■ Example of connected branch.

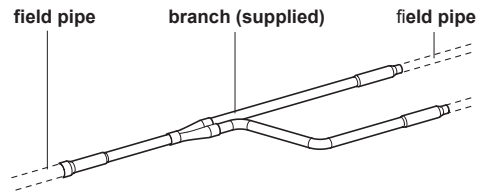

■ Use the supplied heat insulation material to insulate the branches against heat.

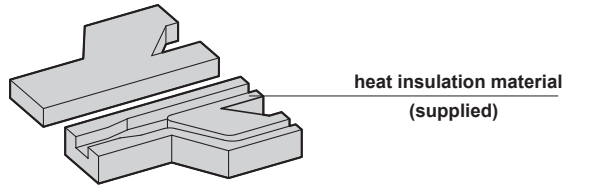

■ Apply the heat insulation material and seal all connections with tape.

